

ASSEMBLY INSTRUCTIONS FOR YOUR

ANDRÉ
FLOOR LAMP

ASSEMBLY INSTRUCTIONS:

NOTE: Do not connect the electricity until lamp is fully assembled.

Unpack and place all parts on a soft surface.

1. Place harp (C) into harp saddle (D) by squeezing harp (C) inward and placing into the opening of harp saddle (D).

2. Remove finial (A) from harp (C).

3. Slide center ring of shade spider (located inside shade (B)) down threaded nipple of harp (C).

4. Thread finial (A) onto threaded section of harp (C) to secure shade (B).

5. Install one (1) Type A, 150 watt maximum bulb into socket.

6. Remove plug cover (E) from polarized plug (F).

7. Plug lamp into wall outlet.

Caution: To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners.

Note: Turn the power off (unplug from the wall outlet) before replacing the bulb, making sure the bulb has had sufficient time to cool down. Do not subject the lamp to any shock while lit as shattering of lamp may result.

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce risk of electric shock, this plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted.

DO NOT ALTER THE PLUG.

