


ASSEMBLY INSTRUCTIONS FOR YOUR  
**Jonathan Adler**  
HAVANA BOOM FLOOR LAMP

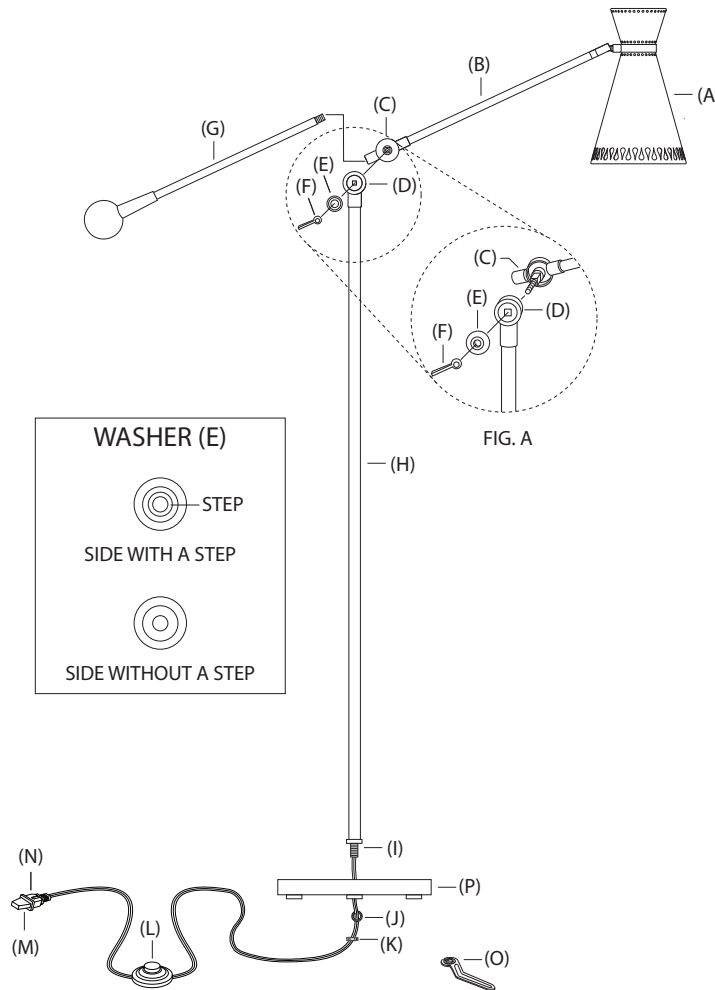

**IMPORTANT SAFETY INSTRUCTIONS**

\*This portable lamp has a polarized plug as a feature to reduce risk of electric shock. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **DO NOT ALTER THE PLUG.**

\*Turn the power off before replacing light bulb, making sure the bulb and shade have had sufficient time to cool.

**ASSEMBLY INSTRUCTIONS**

1. Carefully remove all parts from the carton. Remove packaging material from lamp; do not throw away any parts.
2. Place all parts on a level surface. Align housing (C) on boom arm (B) with housing (D) on column (H), as shown in FIG. A.
3. Place housing (C) and housing (D) together so parts sit flush. Note: Tube inside housing (C) will protrude through hole in housing (D). Place washer (E), and adjustment knob (F) onto exposed tube protruding through housing (D). Turn knob (F) until hand tight. Note: One side of washer (E) has a step around the center hole. The stepped side should be placed inside housing (D). Turn knob (F) will tighten against the flat side (no step) of washer (E). If washer (E) is not placed as described, boom arm will not hold position.
4. Move column (H) towards base (P). Pull wire from below base (P), and place threaded nipple (I) through hole in base (P). Threaded nipple (I) will protrude through the bottom side of base (P). Note: pull cord tight when placing threaded nipple (I) through base (P) to prevent damage to the wire.
5. Hold base (P), and column (H) together and carefully tilt lamp to the side. Slide washer (J) and nut (K) up wire and attach to threaded nipple (I). Tighten nut (K) with wrench (O), provided to secure base (P) to column (I).
6. Carefully tilt assembled parts back into standing position.
7. Insert boom arm (G) into threaded opening in housing (C). Turn until hand tight.
8. Determine desired position of boom arm. Loosen adjustment knob (F) and gently move boom arm into desired position. Tighten adjustment knob (F) to secure position of boom arm.
9. Insert one (1) 60W Max. Type A, medium base bulb into socket, located inside shade (A).
10. Remove protective plastic (M) from polarized plug (N). Insert polarized plug (N) into wall outlet.
11. Use foot switch (L) to control power to lamp.

\*\* To clean, use a soft cloth only. Do not use chemical or abrasive cleaners. \*\*