

ASSEMBLY INSTRUCTIONS FOR YOUR  
**Jonathan Adler**  
HAVANA 3 LIGHT FLOOR LAMP


**IMPORTANT SAFETY INSTRUCTIONS**

- \* This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce risk of electric shock, this plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still doesn't fit, call an electrician.
- \* Never use with an extension cord unless the plug can be fully inserted. **DO NOT ALTER THE PLUG.**
- \* Turn the power off (remove electrical plug from wall outlet) before replacing light bulb. Make sure the fixture has enough time to cool down before removing the old bulb.

**ASSEMBLY INSTRUCTIONS**

NOTE: Do not connect the electricity until lamp is fully assembled.

1. Unpack all parts and remove packing materials.
2. Place base (I) on top of loader (J) so center holes are aligned.
3. Pull the electrical cord exiting loader (J) taught, while positioning column (B) above base (I) and loader (J). NOTE: It is important to pull electrical cord taught when threading parts together to prevent damage to the wire.
4. Insert nipple (A) through center hole in base (I) and loader (J).
5. Hold base (I), loader (J) and column (B) together and tilt to the side.
6. Slide washer (G) and nut (H) up wire and attach to exposed threads on nipple (A). Tighten nut (H) with wrench (M) provided to secure base (I) and loader (J) to column (B).
7. Place base (I), loader (J) and column (B) in an upright position on a level surface. Boom arms will hang down beside column (B).
8. Beginning at the TOP, assemble arms as directed in steps 4 - 6.
9. Unthread adjustment key (D) from bracket (E), as shown in Fig. A.  
NOTE: DO NOT completely remove adjustment key from bracket.
10. Move arm (F) towards bracket (E). Push the wire exiting swivel (C) into opening in column (B). Place swivel (C) into bracket (E), as shown in Fig. B.
11. Once swivel (C) is properly aligned with bracket (E), tighten adjustment key (D), as shown in Fig. C.
12. Repeat steps 4 - 6 for the remaining arms.
13. Place 1 (one) 60W Max. Type A, medium base bulb into each socket.
14. Remove protective plastic (L) from polarized plug (K).
15. Insert polarized plug (K) into wall outlet.
16. To adjust arm position, carefully loosen adjustment key and move arm into desired position. Tighten adjustment key to secure arm in desired position.
17. To adjust position of shade, carefully grasp lower portion of metal shade and move into desired position. NOTE: DO NOT TOUCH METAL SHADES WHILE BULBS ARE ON, AS THEY WILL BE HOT. Make sure shades have sufficient time to cool before making any adjustments.

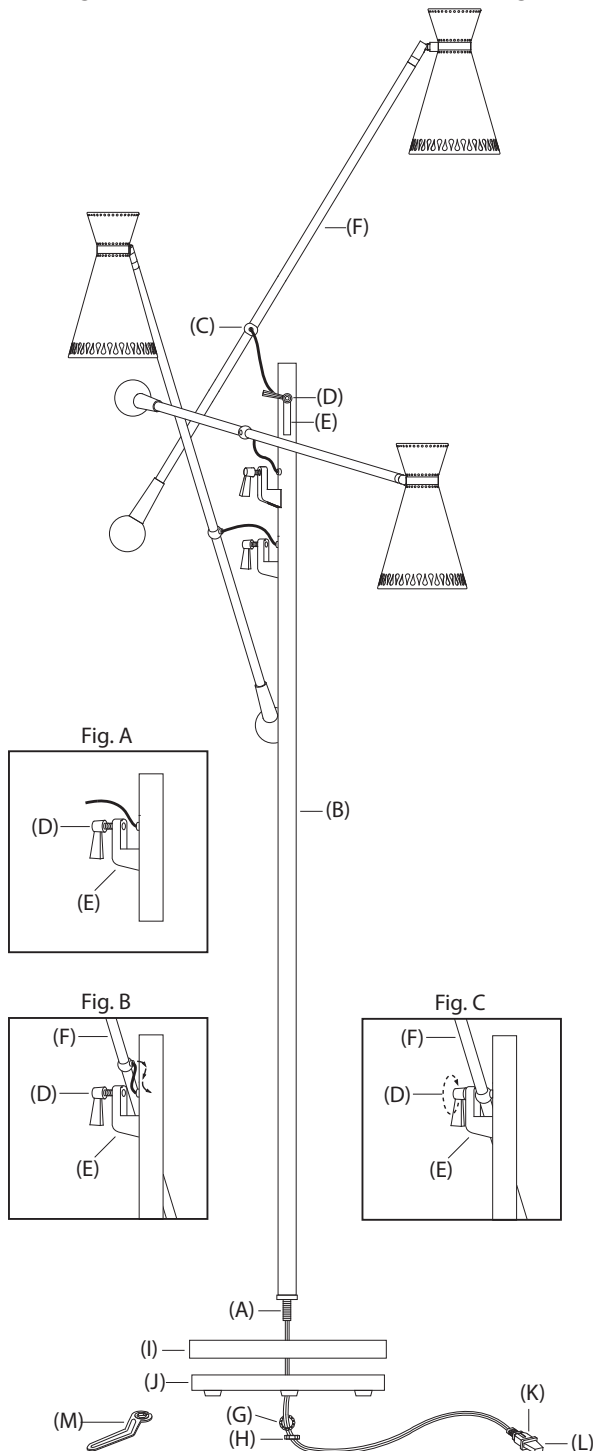

\*\* To clean, use soft cloth ONLY. Do not use any chemical or abrasive cleaners. \*\*