


ia Required: Pairined acrenditiver, Philips acrenditiver, pliera, vine cultura, vine stippera, electrical lape, auticly glasses id Source: (1) LED A19 Bulb MAX 10W ( Not Indude). Instad Associaty Time: 15:50 minutes

ration: Identily and Inspect all parts before beginning Installation. Check package content list and diagrams below to be sure all parts are nt. If any parts are missing or damaged, do not albempt to assemble, Install, or openate the titues. Context outcomer service for replacement

## 

These instructions are provided for your safety. It is very important you read them completely before installing the fodure. We strongly recommend that a licensed, professional electricism perform the installation. Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal

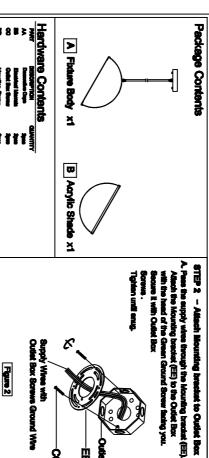

H

8

STEP 3 — Fit Backplate to Mounting bracket Assembly

A. Fit the becipiete to Mounting Screwe (DD) and secure with Decorative Cape (AA), Note: The becipiete should o the Ceiling Canopy to re, remove the (DD) in or out of the Director (A) Calling Canor 8 ⋛

A. Line up a set of holes on the

O(EE) and Hote


ad Mounting Screws (DD)

and Hex Nuts to Mounting bracket

H ġ


STEP 1 — Attach Mounting Screws, Lock Washers

A. Use standard wire connectors to make all whe connections. Twist connectors until wires are fightly bined togethe Wrap each connection with approved electrical large and carefully staff all the connected whee into the Cudet Box. STEP 4 - Wire Connections outlet box (or Red) from outlet box White wire White wire from fluture Black wire from fixture

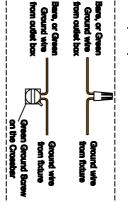


Camply tuck all wires into the culiet box and position the Calling Campy of the Fixture Body (A) over the outlet box. Align the holes TEP 5 - Install Calling Canopy to Calling the Celling Canopy with the Mounting Screws (DD). Caps. (AA) and hand tighten until enug.

Figure 4

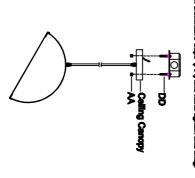

A Install bulbe (Not Include) onto sockets and push anug into place. STEP 6 - Install Bulbs and Acrylic Shade.

B. Line up the three rectangular holes on Acrylic combined together tightly Shade with the three Screws on the Fixture Body, press them then twist about 15 degree to let them

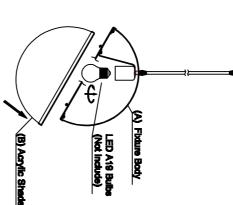

and Calling Campy and proceed to Step 4

2 of 2